
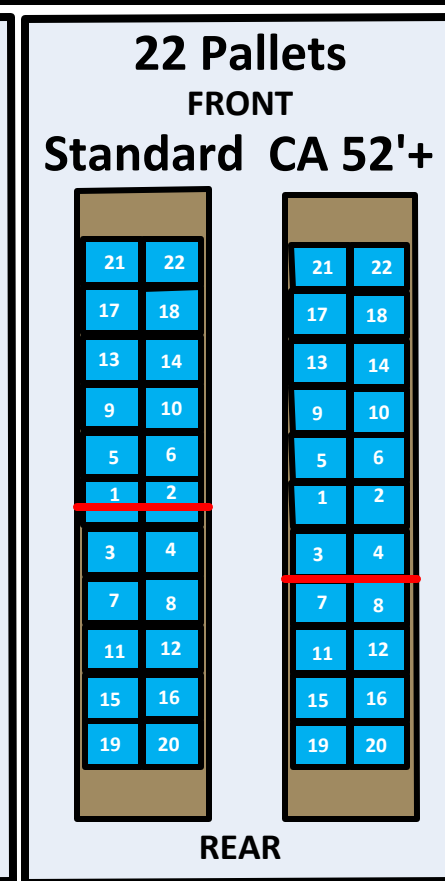
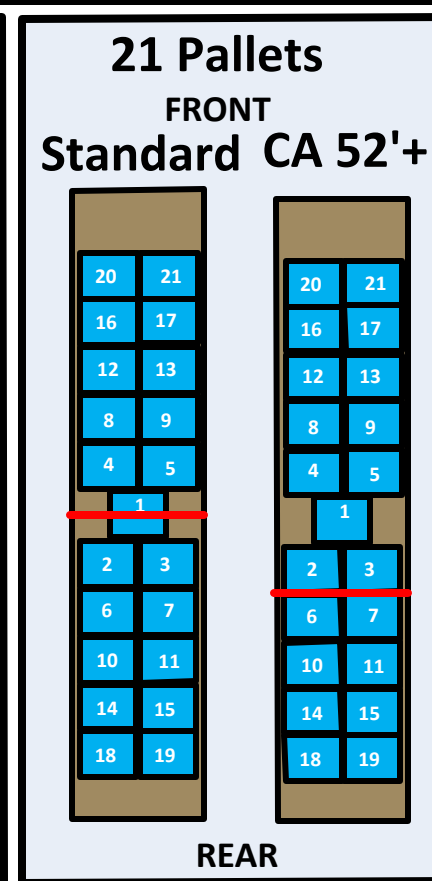
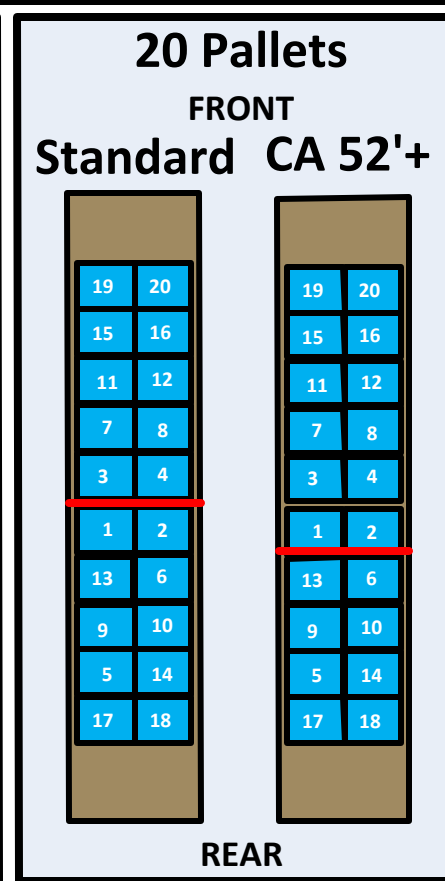
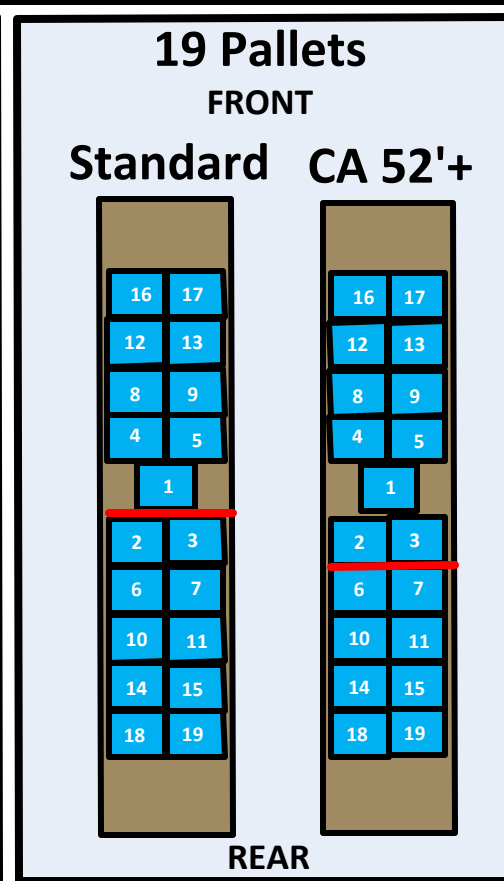
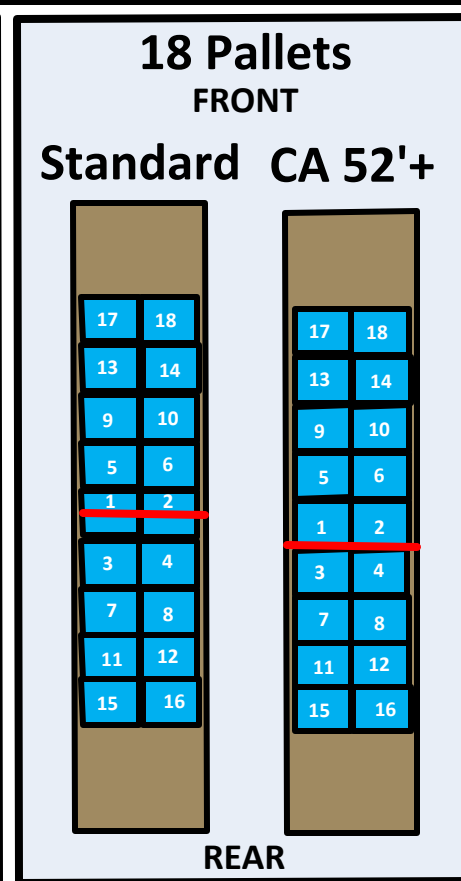


SALT PLANT WAREHOUSE DIAGRAMS

2001E4.00






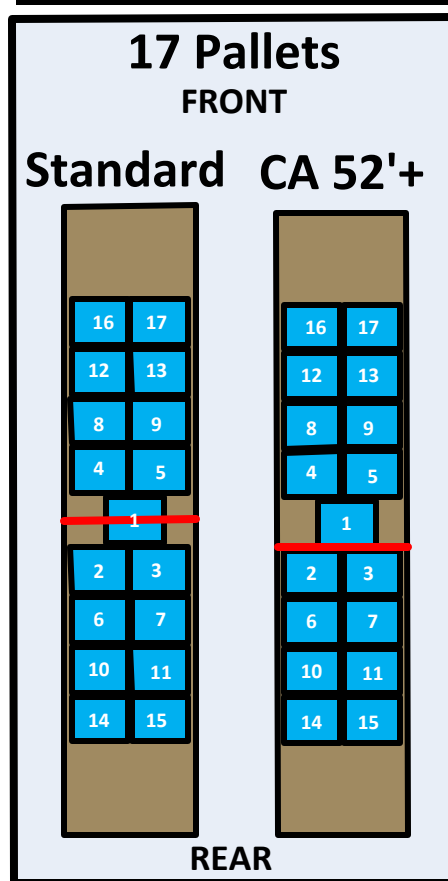


A-Train Flatbeds
26-33 Pallets

Load both the trailer and the pup from the center outward.

B-Train Flatbeds
26-33 Pallets

First load the front of the trailer and then the back of the connected pup (centered over the back axle). Load from the ends toward the center

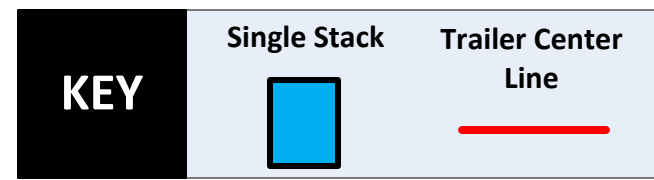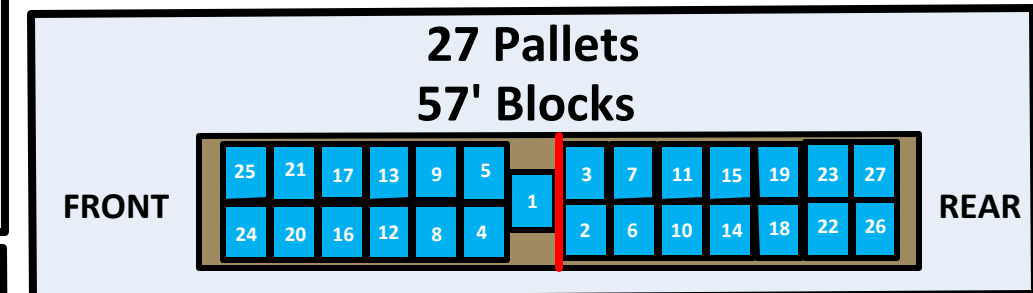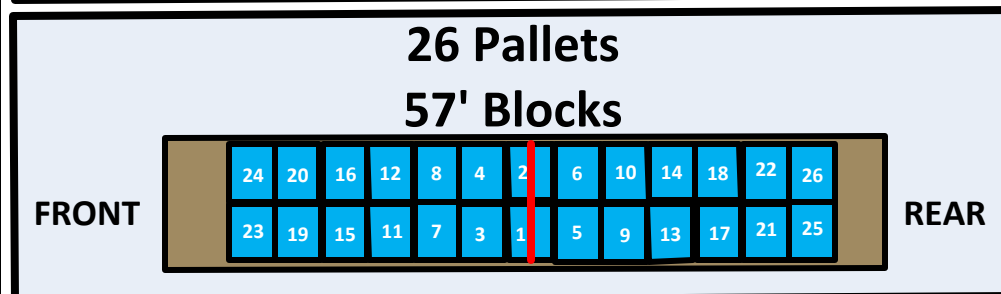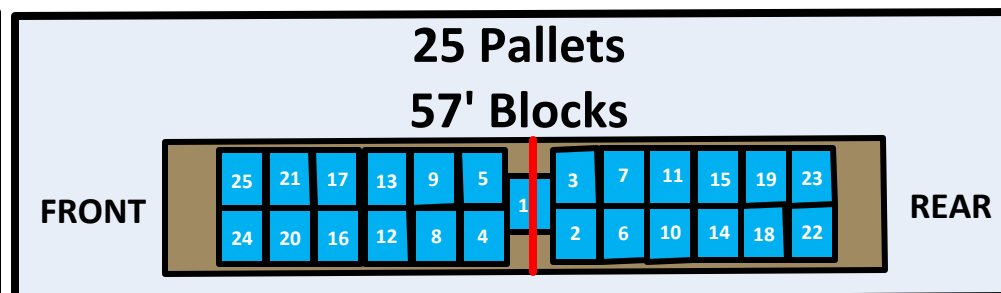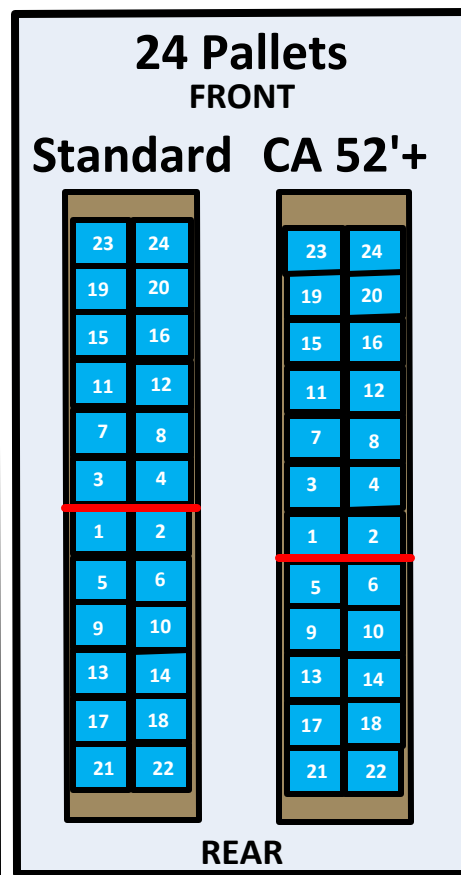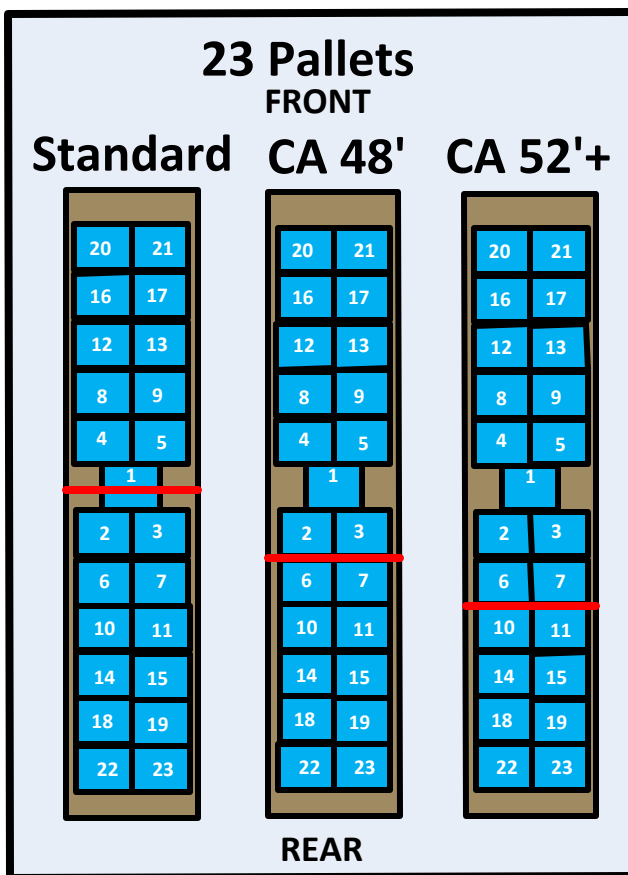

Load flatbed trailers from the center line outward, alternating between the sides of the trailer to keep the load balanced (as indicated in the numbering).

For maxi loads:

- If the tractor has an extra axle, move center of the load approximately 6" closer to the front of the trailer.
- If the tractor does not have an extra axle, the center of the load should be the center of the trailer.

